

# OptiGrill Snacking & Baking

FR  
EN  
DE  
NL  
DA  
SV  
NO  
FI  
ES  
PT  
IT  
EL  
RU  
UK  
TR  
AR  
FA  
PL  
KO  
JP  
TH  
CS  
SK  
HU



Compatible with:  
Compatible avec :  
Kompatibel mit:  
Geschikt voor:  
Kompatibel med:  
Kompatibel med:

Kompatibel med:  
Yhteensopivuus:  
Compatible con:  
Compatível com:  
Kompatibile con:  
Συμβατό με:

Совместим с:  
Сумісний з:  
Uyumlu olduđu cihazlar:  
متوافقة مع:  
سازگار با:  
Kompatybilność z:

호환 가능:  
互換品:  
ใช้งานได้กับ:  
Kompatibilní s:  
Kompatibilné s:  
Kompatibilitás:

OptiGrill+  
OptiGrill Smart

Models:  
Modèles :  
Modelle:  
Modellen:  
Standardcertifikater:  
Modeller:

Modeller:  
Mallit:  
Modelos:  
Modelos:  
Modelli:  
Μοντέλα:

Модели:  
Modeli:  
Modeller:  
الموديلات:  
مدل ها:  
Modele:

모델:  
機種:  
รุ่น:  
Modely:  
Modely:  
Típusok:

 
 
GC71 xx  
GC73 xx  
GR71 xx  
GO71 xx  
series

## Recommendation for the use of Snacking & Baking accessory



---

EN


- Before first use, remove all packaging materials, stickers and accessories from the inside and the outside of the plates.
- Read the instructions carefully, common to different models and keep them within reach.
- Refer to the appliance instructions for the use of this Snacking & Baking accessory and associated recommendations.
- Check that the both sides of the upper grill plate and the both sides of the Snacking & Baking accessory are well cleaned before use.
- To prevent damage to the cooking plates and Snacking & Baking accessory, only use them on the appliance for which they were designed (e.g., do not place in an oven, on the gas ring or electric hot-plate, etc.).
- Ensure that the plates and Snacking & Baking accessory are stable, well positioned and correctly clipped to the appliance. Only use the cooking plates and Snacking & Baking accessory provided with the appliance or bought from an Approved Service Centre.
- To avoid damaging the Snacking & Baking accessory, always use plastic or wooden utensils.
- Never cut food directly on the Snacking & Baking accessory.
- Do not place the hot Snacking & Baking accessory under water or on a fragile surface.
- To preserve the non-stick coating qualities, do not let it heat too long empty.
- The Snacking & Baking accessory must never be handled hot, except by the handles.
- Never heat the appliance without the 2 grill cooking plates or with upper grill plate and Snacking & Baking accessory.
- When using for the first time, wash the plates and Snacking & Baking accessory, pour a little cooking oil on the Snacking & Baking accessory then wipe it with an absorbent kitchen towel.
- Do not place cooking utensils on the cooking surfaces of the appliance.
- We advise you to use a sponge, hot water and washing-up liquid to clean the cooking plates and Snacking & Baking, then rinse thoroughly to remove any residue. Dry thoroughly using a paper towel.
- Do not use metalling scouring pads, steel wool, or any abrasive cleaners to clean any part of your grill, only use nylon or nonmetallic cleaning pads. In the case of difficult cleaning, soak the cooking plates in hot water mixed with washing liquid.
- The Snacking & Baking accessory is not a baking dish, do not put heating in an oven or on any other heat source, other than in your appliance.
- Do not heat your Snacking & Baking accessory with oil or grease, risk of inflammation.
- Do not use your Snacking & Baking accessory to make browning.
- Do not make recipe with oil or grease. This appliance is not a deep fryer or a frying pan. It is therefore totally excluded to make french fries, donuts, or other cooking with oil or grease.

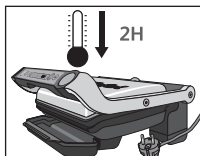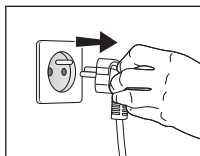

1. If your OptiGrill is already running and you want to use your Snacking & Baking accessory, unplug grill from wall outlet and let it cool for at least 2 hours.

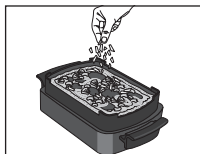
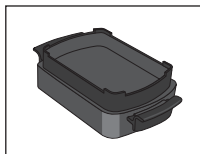


2. Put the ingredients in the Snacking & Baking accessory.

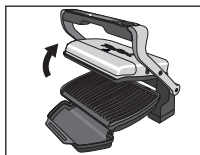





3. Open the grill, remove lower grill plate and replace by your Snacking & Baking accessory.

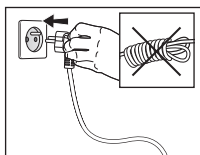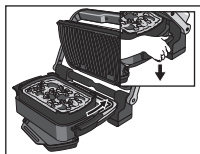
**CAUTION:** Be careful that upper grill plate is correctly installed in the appliance.



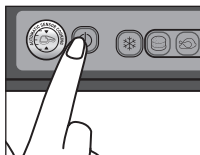




4. Close the grill and plug it.

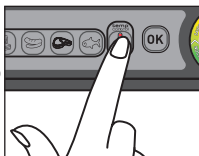




5. Press the On/Off button, the  and  buttons blink, the color light indicator is green .




6. Press the  button until desired temperature is reached with the help of the color light indicator.
- Fixed green color light indicator: 85°C to 110°C 
  - Fixed yellow color light indicator: 150°C to 165°C 
  - Fixed orange color light indicator: 190°C to 205°C 
  - Fixed red color light indicator: 240°C to 255°C 




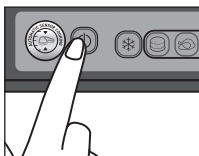
7. Begin cooking by pressing the  button. The  and  buttons become fixed, the color light indicator blinks until temperature desired is reached.





8. When the desired temperature is reached the grill “beeps” and the color light indicator becomes fixed. Then the cooking process takes place.

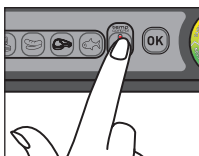

9. You can adjust the temperature during the cooking progress. Press the  button in order to reach the desired temperature (follow at the same time the color light indicator).





10. End the cooking by pressing the ON/OFF button. All buttons switch off, the grill stops heating/cooking.

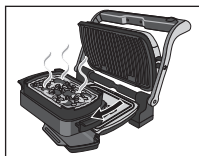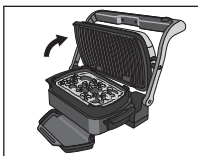

11. Open the grill and remove the Snacking & Baking accessory from the grill thanks to its handles.

CAUTION: hot surfaces, the use of gloves are recommended.

EN

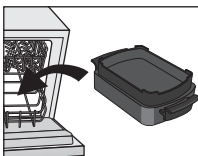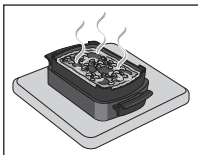

12. The Snacking & Baking accessory can go in the dishwasher.

FR	p. 2 – 5
EN	p. 6 – 9
DE	p. 10 – 13
NL	p. 14 – 17
DA	p. 18 – 21
SV	p. 22 – 25
NO	p. 26 – 29
FI	p. 30 – 33
ES	p. 34 – 37
PT	p. 38 – 41
IT	p. 42 – 45
EL	p. 46 – 49
RU	p. 50 – 53
UK	p. 54 – 57
TR	p. 58 – 61
AR	p. 62 – 65
FA	p. 66 – 69
PL	p. 70 – 73
KO	p. 74 – 77
JP	p. 78 – 81
TH	p. 82 – 85
CS	p. 86 – 89
SK	p. 90 – 93
HU	p. 94 – 97